


8. REMOVE PLANETARY RING GEAR FLANGE

- (a) Remove the planetary ring gear flange and shim.

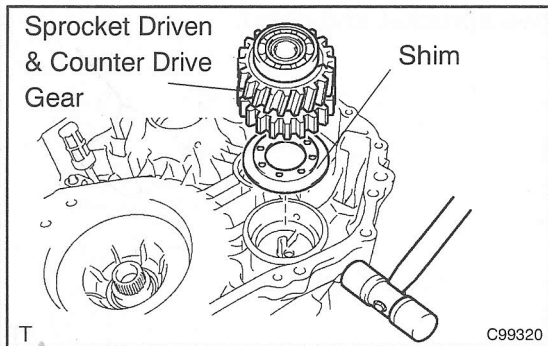

9. REMOVE SPROCKET DRIVEN & COUNTER DRIVE GEAR

- (a) Use a plastic hammer to tap the motor assy case and remove the counter drive gear and shim.

HINT:

Remove the counter drive gear while pulling it vertically.